


HWRF Initialization Overview

Christina Holt

NOAA ESRL Global Systems Division, Boulder CO
University of Colorado CIRES , Boulder CO

HWRF v3.7a Overview

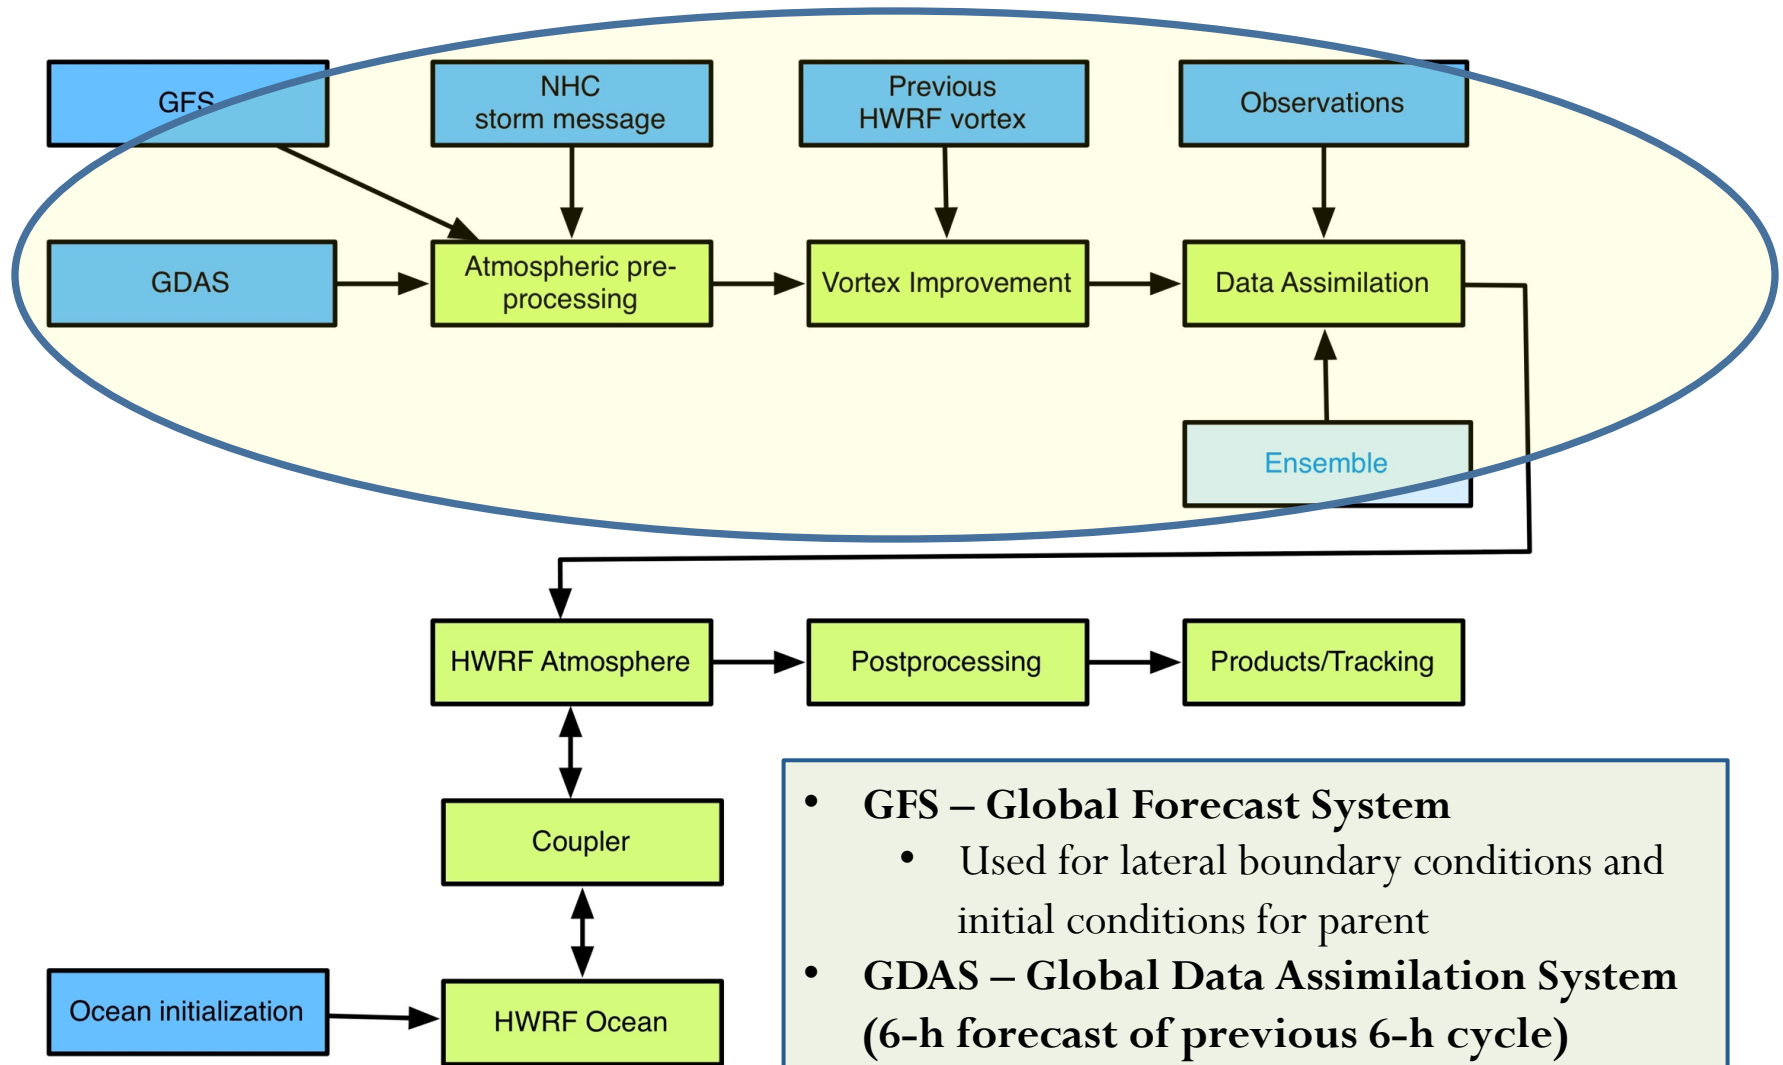

- **GFS – Global Forecast System**
 - Used for lateral boundary conditions and initial conditions for parent
- **GDAS – Global Data Assimilation System (6-h forecast of previous 6-h cycle)**
 - Used for initialization of nests
- **GFS ensemble**
 - Used for hybrid DA

Domain location

HWRP is only launched when a TC Vital message is issued

Parent domain location depends on the storm location and 72-h official projection


- E. g., JTWC 07W SOULIK 20130709 1200 203N 1381E 285 057...
- Domain center latitude (CENLA)
 - if $STORM_LAT < 15.0$ then $CENLA=15.0$
 - if $15.0 \leq STORM_LAT \leq 25.0$ then $CENLA=STORM_LAT$
 - if $25.0 < STORM_LAT < 35.0$ then $CENLA=25.0$
 - etc.
- Domain center longitude (CENLO)
 - The domain center longitude is the average of storm center and the 72-h forecast
 - If 72-h forecast absent, d01 center is 20 W from storm center
 - To assure that the domain center is separated from the storm center by at most 5 degrees, the following procedure is followed:
 - if $CENLO > STORM_LON+5$ then $CENLO= STORM_LON + 5$
 - if $CENLO < STORM_LON- 5$ then $CENLO= STORM_LON - 5$

The outer nest (d02) and inner nest (d03) are centered on the storm

Location (10*lat , 10*lon)

Direction($^{\circ}$); speed (dm/s)

WRF Preprocessing System (WPS)

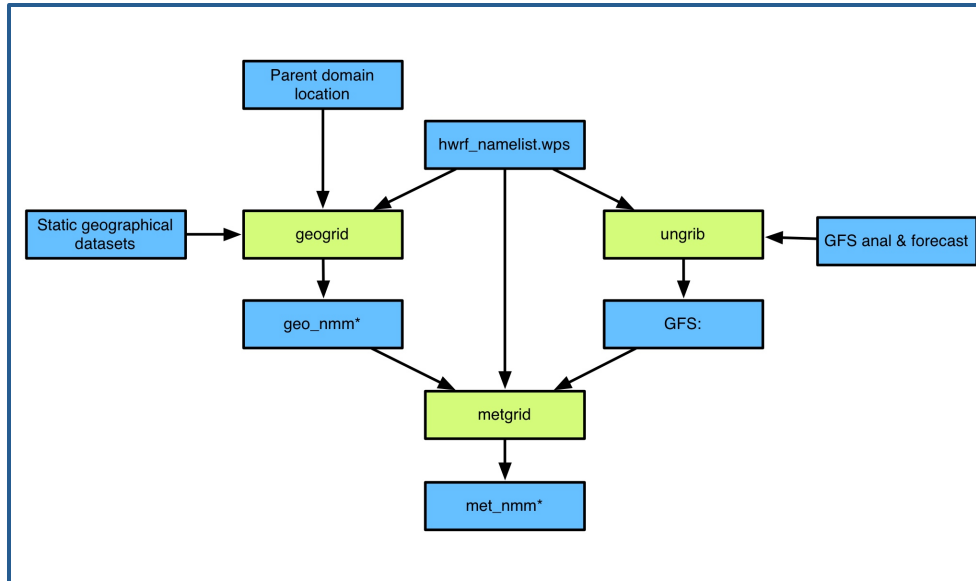

Script determines domain location

Geogrid reads geographical static data (topography etc.) and interpolates them to WRF grids

Ungrib reads selected variables from global model analysis and forecast in GRIB format

Metgrid horizontally interpolates global model data to WRF grid

WRF Preprocessing System Users' Guide (see Chapter 2):

http://www.dtcenter.org/HurrWRF/users/docs/users_guide/WRF-NMM_2015.pdf

Example of WPS namelist

&share

```
wrf_core = 'NMM',  
max_dom = 3,  
start_date = '2012-10-26_12:00:00',  
end_date = '2012-10-31_12:00:00',  
interval_seconds = 432000,  
io_form_geogrid = 2, /
```

&geogrid

```
parent_id      = 1,1,2,  
parent_grid_ratio = 1,3,3,  
i_parent_start = 1,99,12,  
j_parent_start = 1,201,35,  
e_we          = 288, 142, 265  
e_sn          = 576, 274, 472  
geog_data_res = '2m','2m','2m'  
dx = 0.135,  
dy = 0.135,
```

```
map_proj = 'rotated_ll',  
ref_lat  = 21.0,  
ref_lon  = 287.25,  
geog_data_path = path_to_datasets/wps_geog,  
opt_geogrid_tbl_path = path_to_geogrid_table,
```

&ungrib

```
out_format = 'WPS',  
prefix = 'FILE', /
```

&metgrid

```
fg_name = 'FILE',  
io_form_metgrid = 2,  
opt_metgrid_tbl_path = path_to_metgrid_table
```

Center of parent domain

WPS geographical dataset

(i,j) of SW corner of
parent domain

Grid spacing of d01


Number of grid points in each domain



Additional files used in WPS

- **Geogrid table**
 - Specifies source and interpolation method for geographical datasets
- **Ungrib table:Vtable**
 - Specifies which fields to extract from GRIB file
- **Metgrid table**
 - Specifies methods for interpolating parent model data to WRF grid

The *real* program

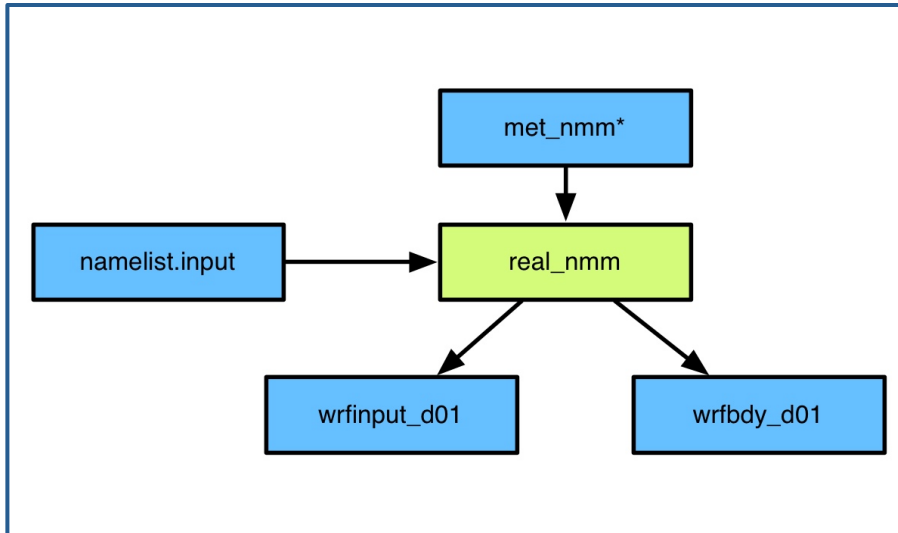

The *real_nmm.exe* program is used to vertically interpolate the global model data to the WRF levels

HWRF operational uses 61 levels in AL & EP, and 43 in all other basins by default. (These configurations can be used for any basin)

Real_nmm.exe is also used to compute derived variables that are not present in the global data but are needed for WRF

Real_nmm.exe outputs initial & and boundary conditions that can be used to start WRF

For idealized simulations, program *ideal.exe* is used instead of *real_nmm.exe*

Real Users' Guide (see Chapter 3):

http://www.dtcenter.org/HurrWRF/users/docs/users_guide/WRF-NMM_2015.pdf

The real/WRF namelist

&time_control

Begin, end time

Freq of boundary files

Freq of output

&domains

Timestep

Number of domains and dimensions

Grid spacing

Location of nests

Vertical levels

&physics

Cumulus, microphysics, radiation, PBL

Physics timesteps

Vortex tracker options

WRF also uses several lookup tables to expedite computations in the physical parameterizations


WRF Users' Guide (see Chapter 4):

http://www.dtcenter.org/HurrWRF/users/docs/users_guide/WRF-NMM_2015.pdf

Review

- **Step 1:** define location of parent domain
- **Geogrid:** puts geographical static data in WRF grid
- **Ungrib & Metgrid:** horizontally interpolate GFS data (in GRIB format) to WRF parent grid for initialization
- **Real:** interpolate GFS data to WRF vertical levels
- Once steps above are completed, a full set of ICs in the 3D parent WRF grid are available for starting the main forecast
- All of the steps above are performed automatically by the HWRF Python scripts
- The next steps are used to improve the vortex in these ICs

Preparing vortex initialization: Analysis

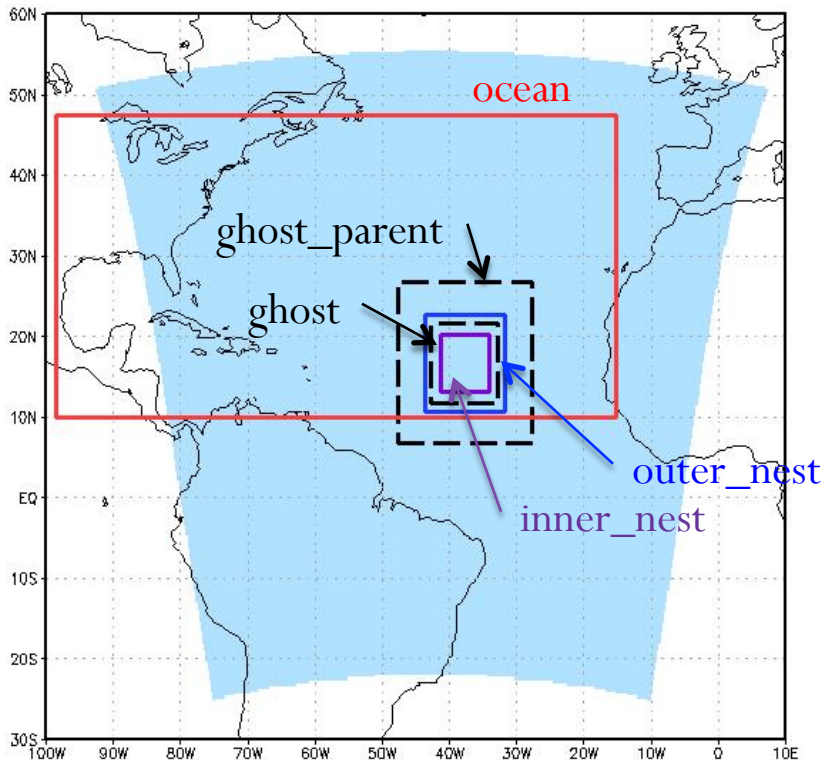

Step 1: *WRF Analysis* run (90 s WRF run)

- Is used as a tool to downscale global data from *real*'s wrfinput_d01 file to HWRF outer_nest (d02), and inner_nest (d03)
- Outputs “analyses” files for d02 and d03, which are t=0 “WRF restart” files, containing variables needed by vortex relocation

Domains for *WRF Analysis* and HWRF forecast are identical

d01 - 18 km

d02 – 6 km


d03 - 2 km

80°x80°

12°x12°

7.1°x7.1°

Preparing vortex initialization: Ghost

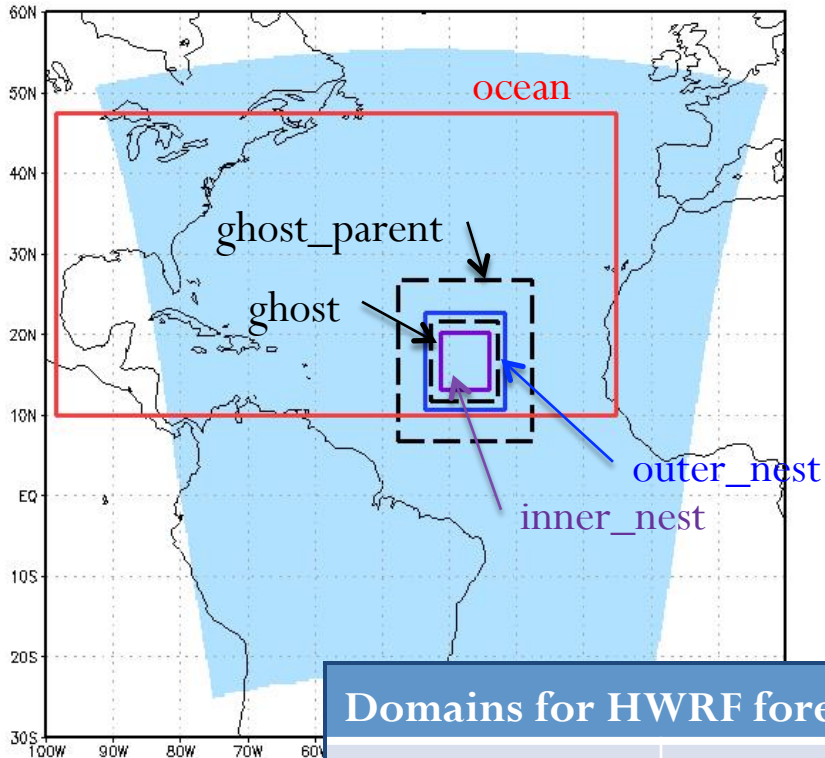


Step 2: *WRF Ghost* run (90 s *WRF* run)

- Downscales global data from *real*'s wrfinput_d01 file to a large high-resolution domain for storm-scale data assimilation
- Outputs ghost-sized “analyses” files for ghost d02 and ghost d03, containing variables needed by DA package

Domains for HWRF forecast, *WRF Analysis*, *WRF Ghost*

	d01 - 18 km	d02 - 6 km	d03 - 2 km
HWRF Forecast	80°x80°	12°x12°	7.1°x7.1°
<i>WRF Analysis</i>	80°x80°	12°x12°	7.1°x7.1°
<i>WRF Ghost</i>	80°x80°	26°x26°	13°x13°

Summary of last Analysis & Ghost runs

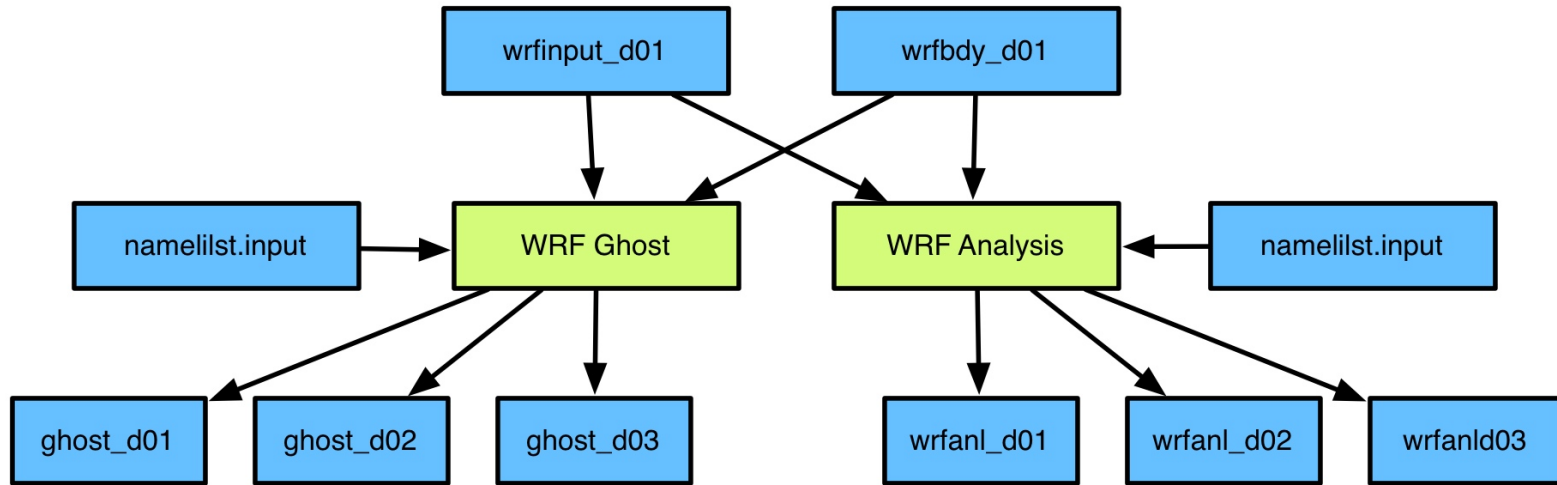

WRF Ghost 90-s run

- Downscales info from global model
- Provides first guess for storm-scale DA

WRF Analysis 90-s run

- Downscales info from global model
- d01, d02, d03 used as main input to vortex initialization procedure
- d01 output used for identifying location of vortex in global model for removal

Vortex initialization: Stage 1

Cold Start?

OR

Cycled Start?

IF

Intensity $< 14 \text{ ms}^{-1}$

OR

Previous 6 -h forecast NOT available

THEN

Exit Stage 1

IF


Intensity $> 14 \text{ ms}^{-1}$

AND

Previous 6 -h forecast IS available


THEN

Start vortex adjustment process by extracting HWRF vortex from previous forecast

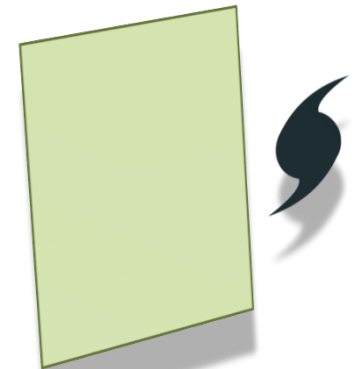


Vortex initialization: Stage 2

Separate the GDAS first guess vortex from environmental flow

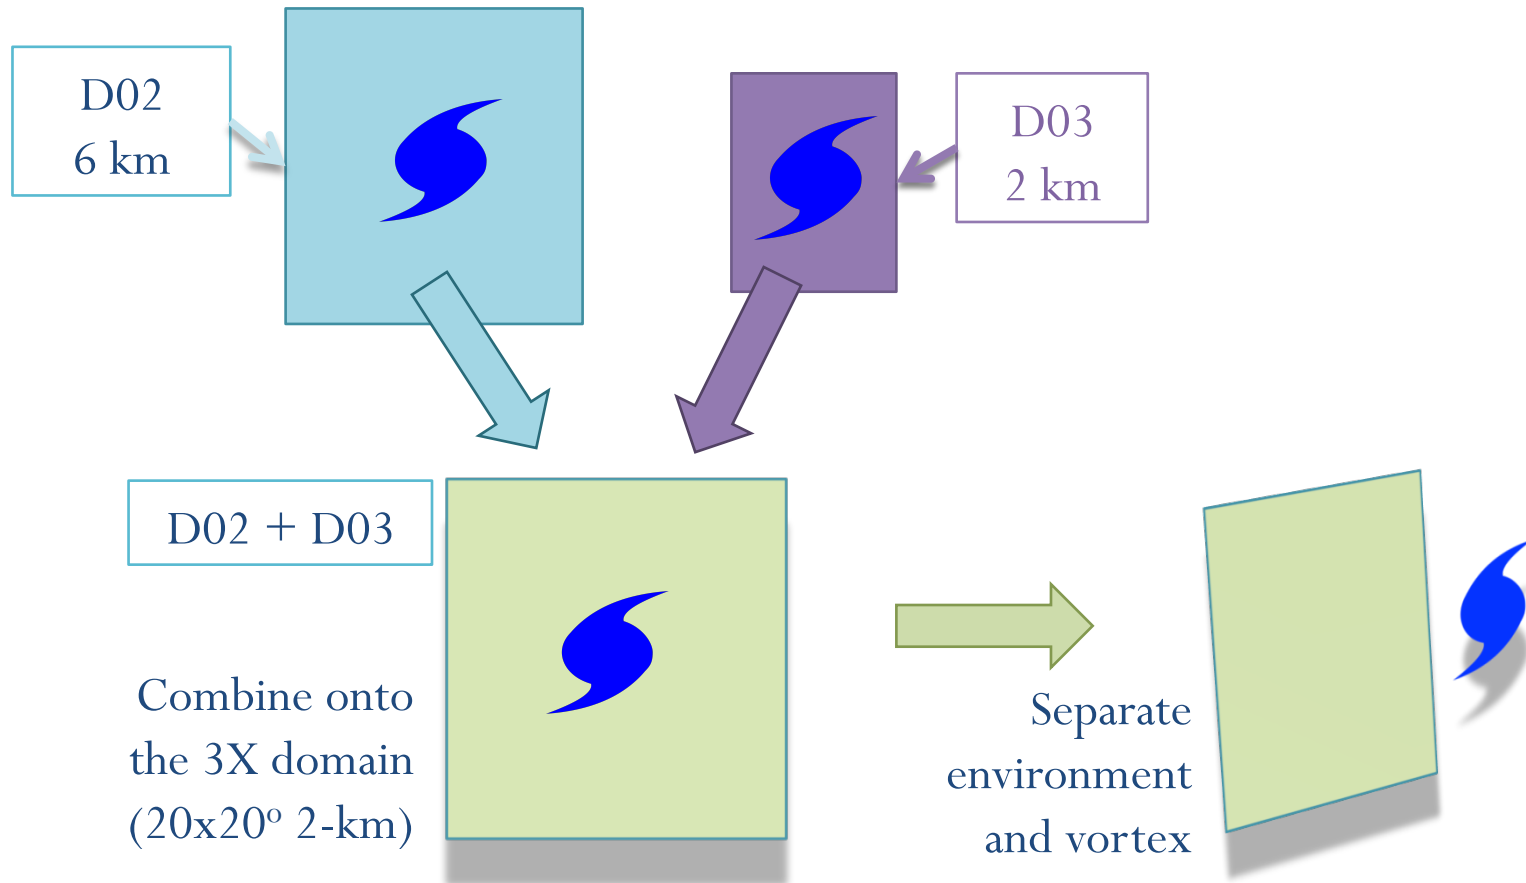


Vortex initialization: Stage 3

Determine which vortex will be used for initializing HWRF and update it using TC Vitals

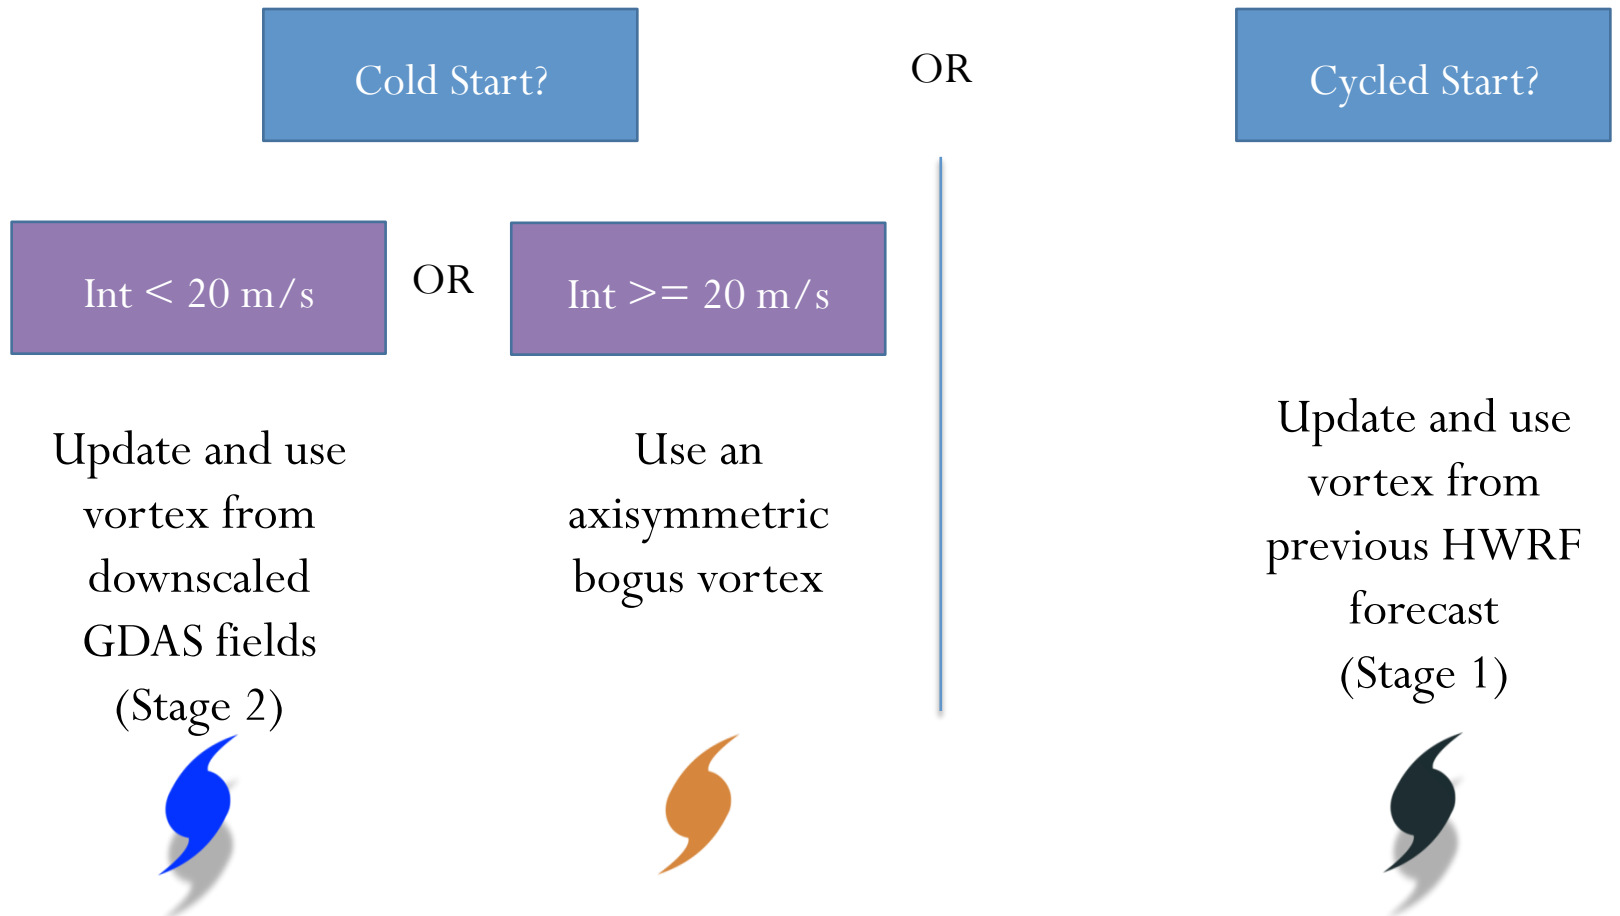

Vortex initialization: Stage 3


Put selected vortex in GDAS environmental flow for both analysis and ghost domains

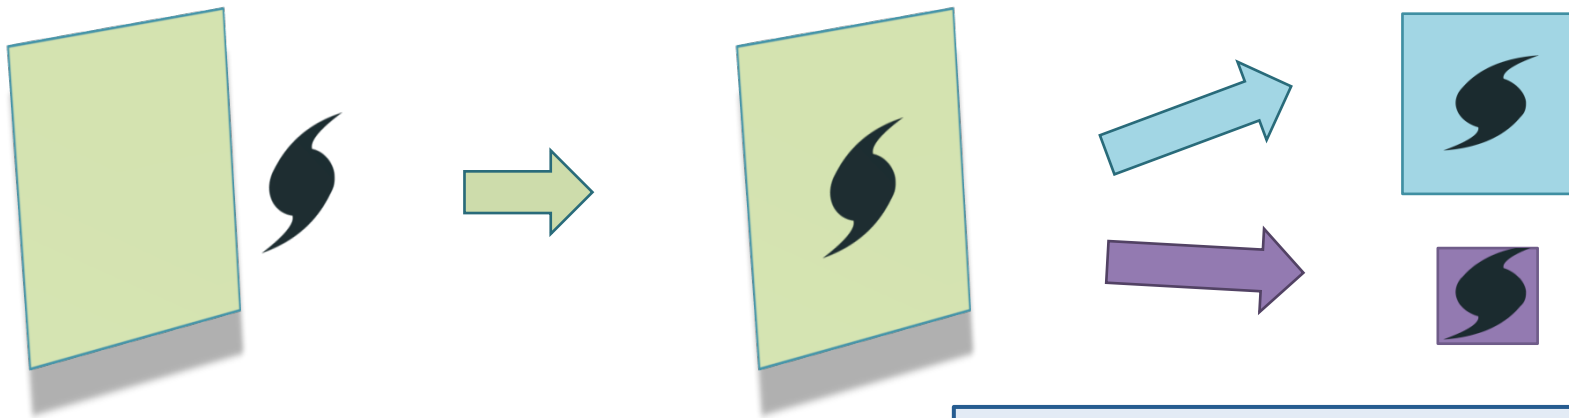

Final result is updated fields for

- *HWRF Forecast domains*
 - *d02 (outer nest)*
 - *d03 (inner nest)*
- *HWRF DA domains*
 - *ghost (d03)*
 - *ghost parent (d02)*

GSI data assimilation (simplified)

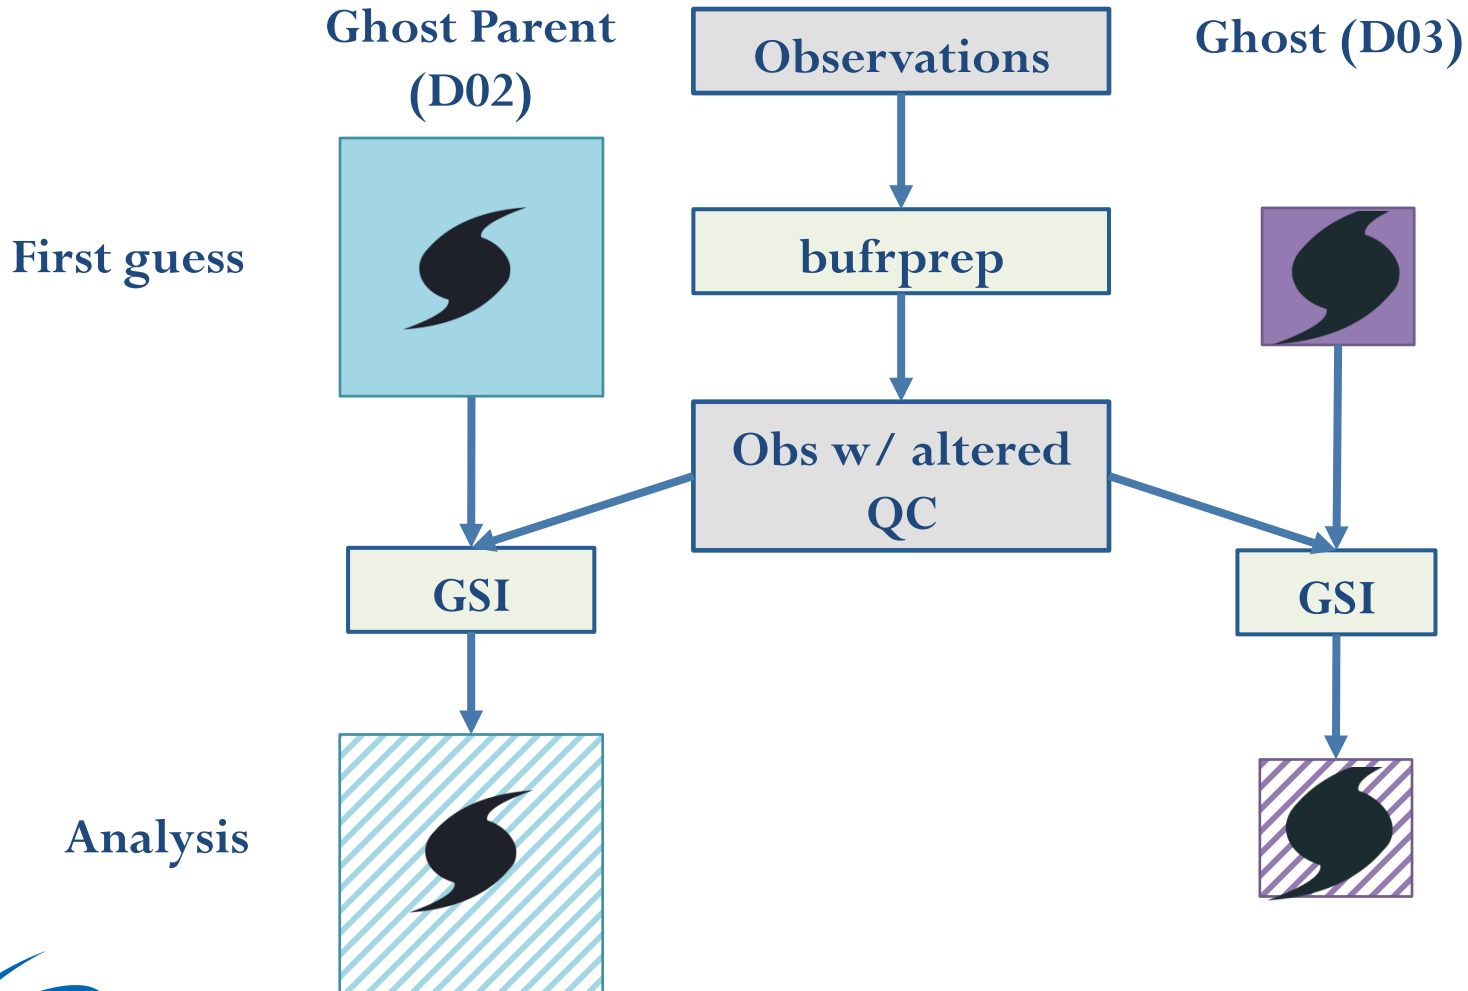


GSI data assimilation (FGAT detail)

Ghost Parent
(D02)

Ghost (D03)


First guesses at
-3h, 0h, +3h
(WPS, Ghost,
Analysis, real,
and relocate are
done for 3 time
levels in order to
use First Guess at
Appropriate
Time – FGAT)

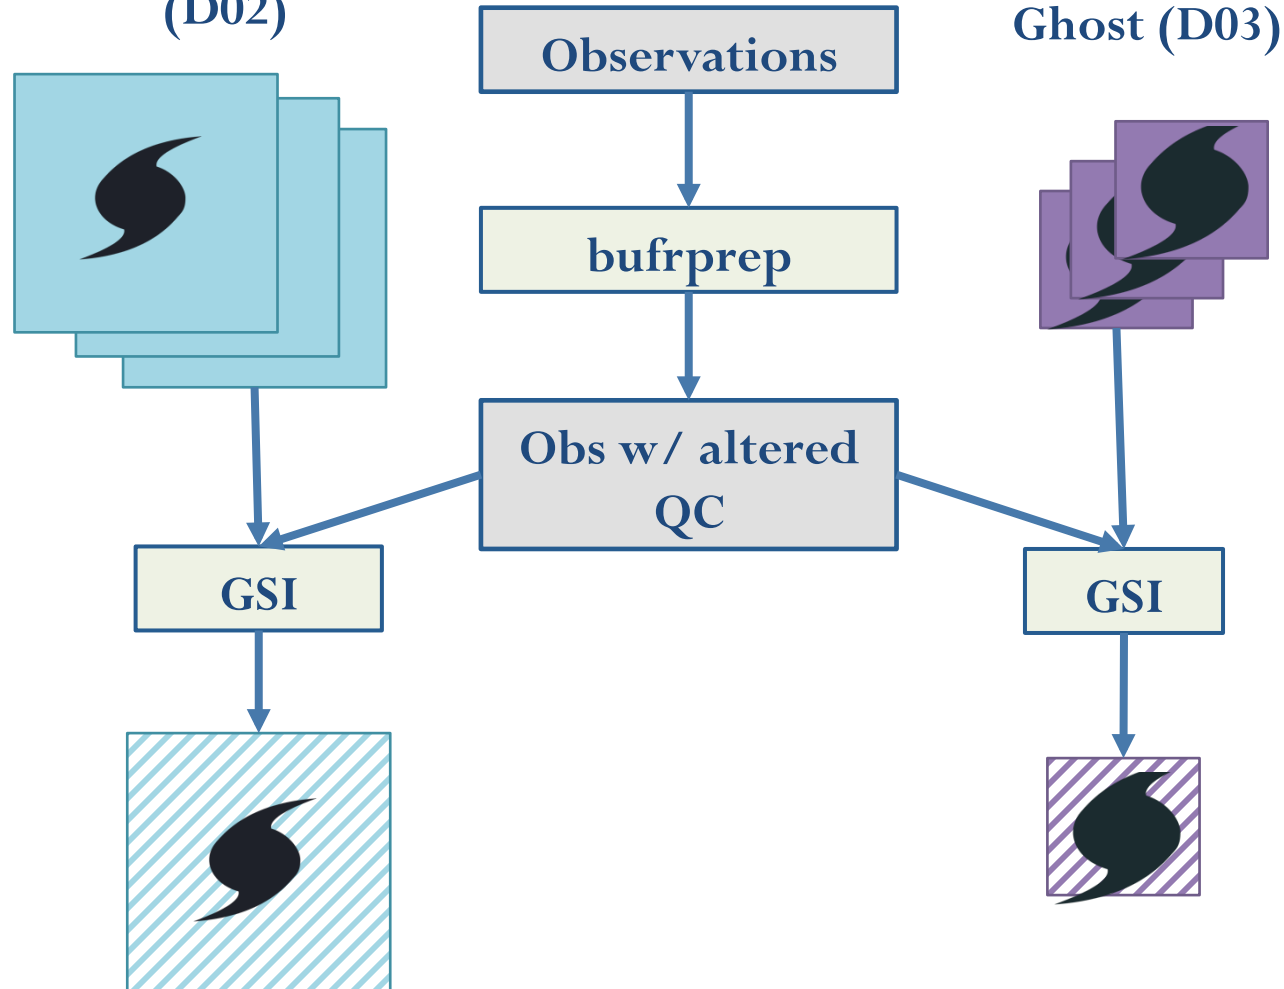

Analysis




Merge

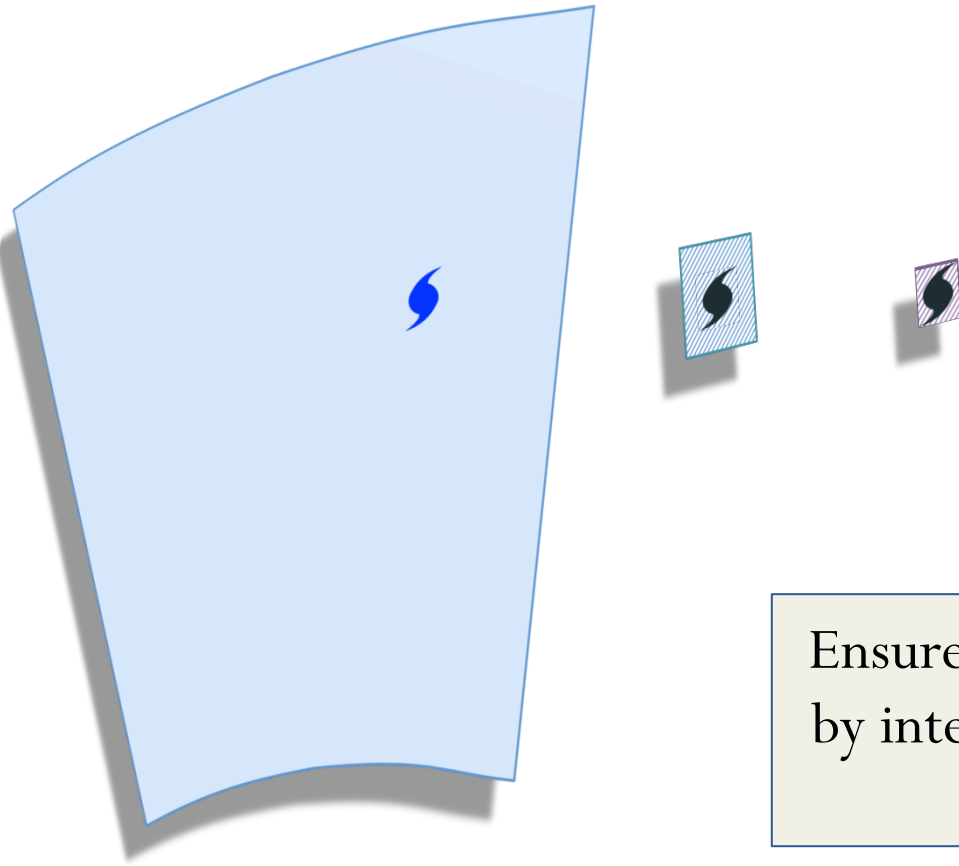

Ensures consistency between domains
by interpolating data from inner nests
to their parent

Initial conditions for HWRF forecast

wrfinput_d01

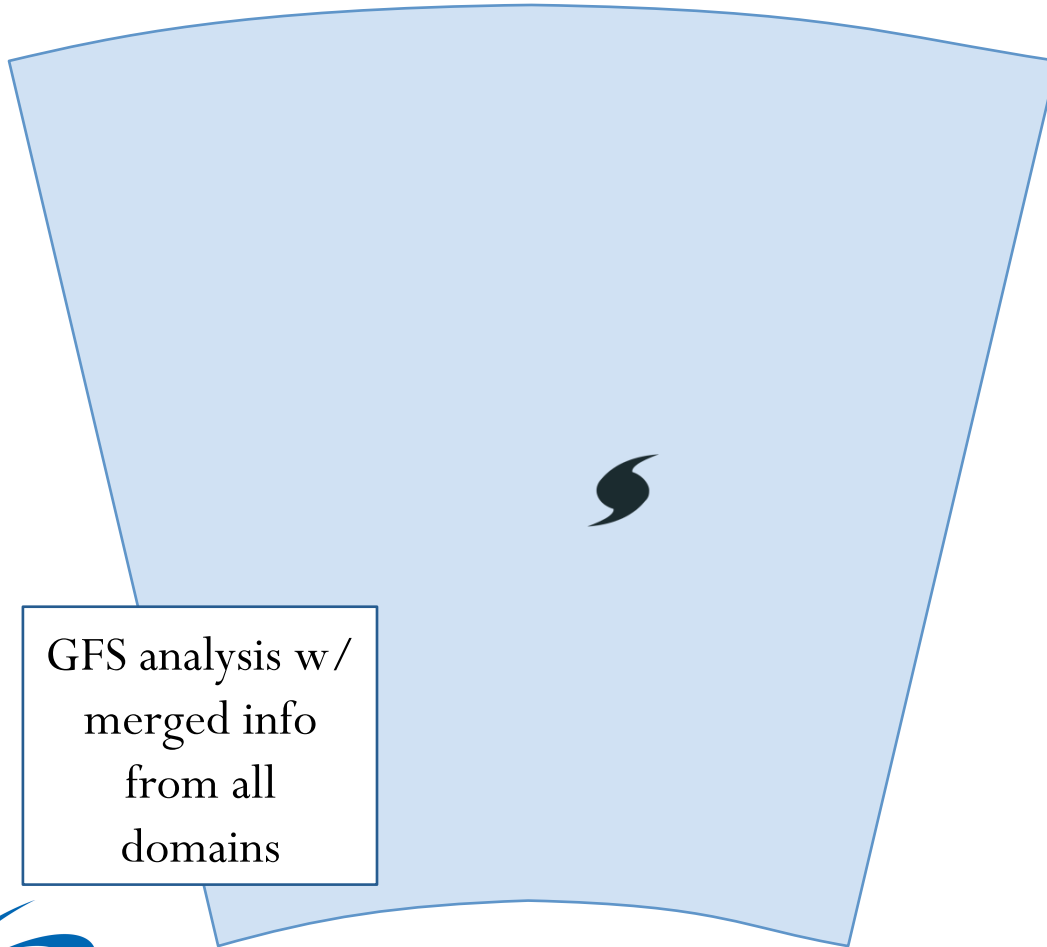

GFS analysis w/
merged info
from all
domains

wrfinput_d02



wrfinput_d03



GDAS background w/
vortex improvement,
GSI data assimilation,
and merged info from all
domains

Thank you for your interest!

You can...

- Ask questions during the tutorial
- Visit our website: <http://www.dtcenter.org/HurrWRF/users>
 - HWRF v3.7a Users Guide:
http://www.dtcenter.org/HurrWRF/users/docs/users_guide/HWRF_v3.7a_UG.pdf
 - Scientific Documentation:
http://www.dtcenter.org/HurrWRF/users/docs/scientific_documents/HWRF_v3.7a_SD.pdf
 - WRF-NMM Users Guide:
http://www.dtcenter.org/HurrWRF/users/docs/users_guide/WRF-NMM_2015.pdf
- Contact me later: christina.holt@noaa.gov
- Reach our user helpdesk: hwrf-help@ucar.edu

